



# Nikon Coolpix L340 Memory Card Replacement

This guide will walk you through the process of replacing a memory card if it is not working properly or if you are inserting one for the first time.

Written By: Kelly Kryzak



## INTRODUCTION

Follow this step by step guide for memory card replacement.

## Step 1 — Memory Card



- Turn the camera so that the flash is facing downward- you are now looking at the bottom of the camera.
- If the camera lens is pointing towards you, there should be a small lever on the right hand side.
- Take this lever and push it away from your body, while simultaneously pulling upwards.

## Step 2



- Gently press down on the memory card until you hear a click, then release the pressure to eject the card and slowly pull it upwards out of the slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 08:09:36 PM.